


Blank space for 787-10 variant

Instructions





Scan


A14

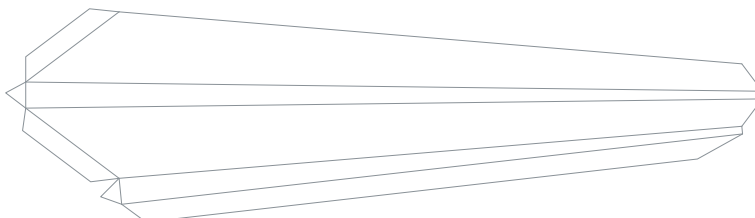


A16L

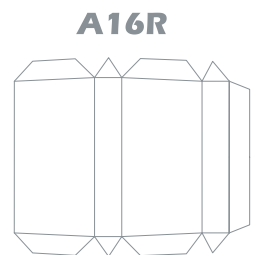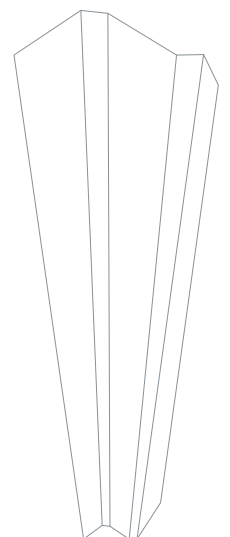

A16R

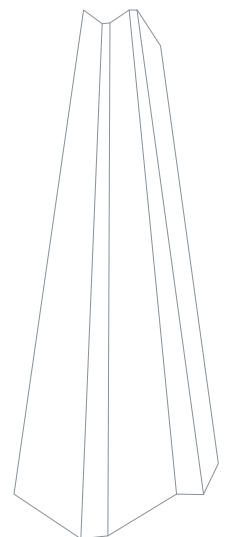

A17R

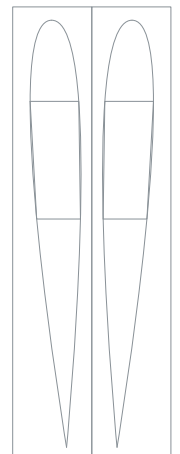

A20



A21



A22




A23



A24L




A24R

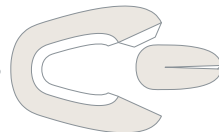

A18

A19

A17L

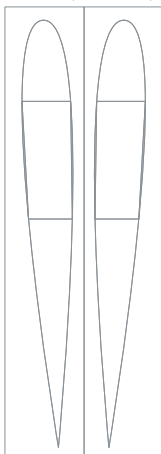

A6L

A6R

A1

A2

A3

A4

A5

A9


A10


A11

A12

A13



A15

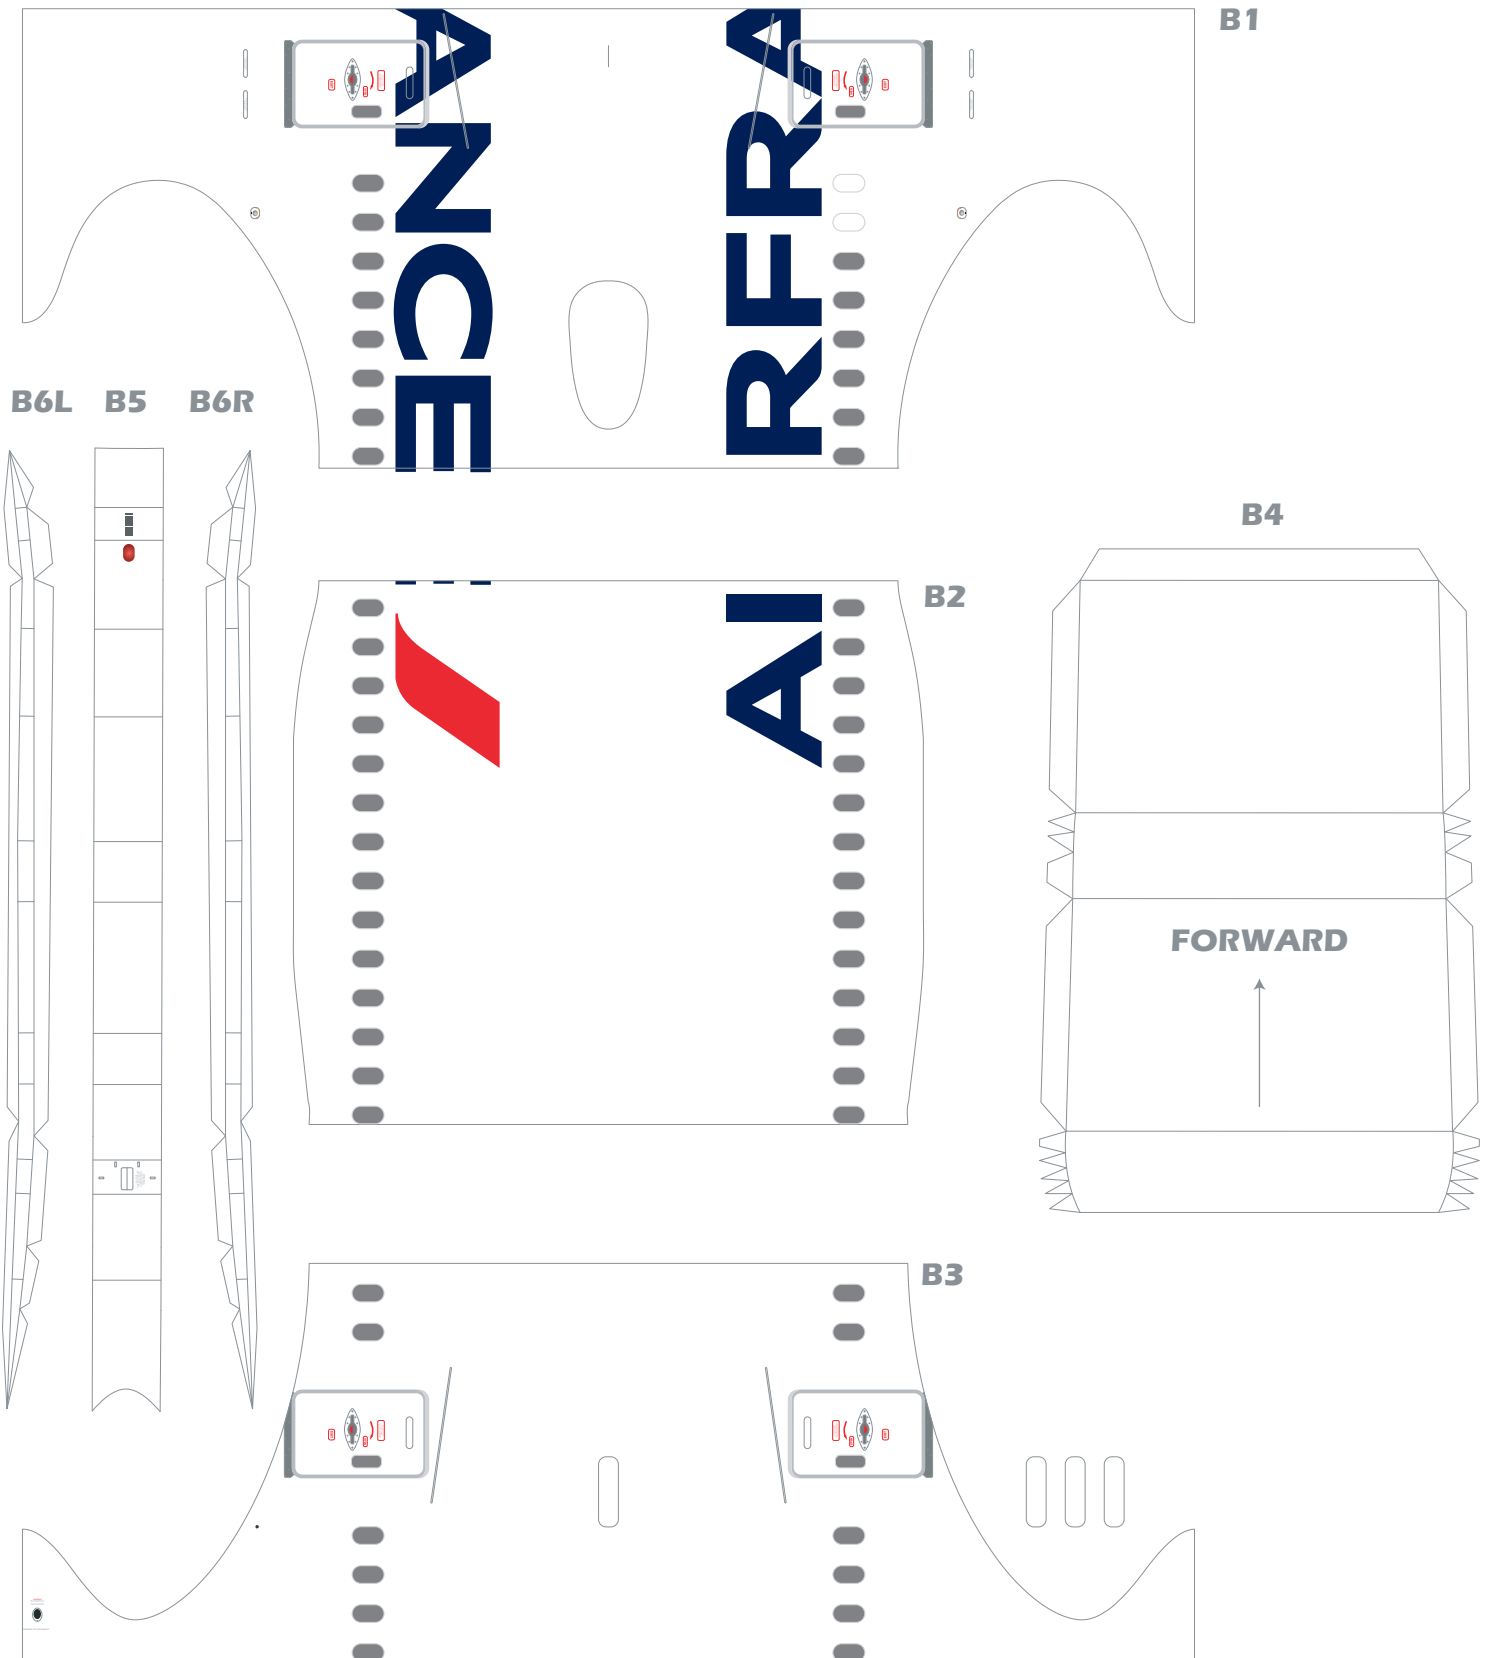


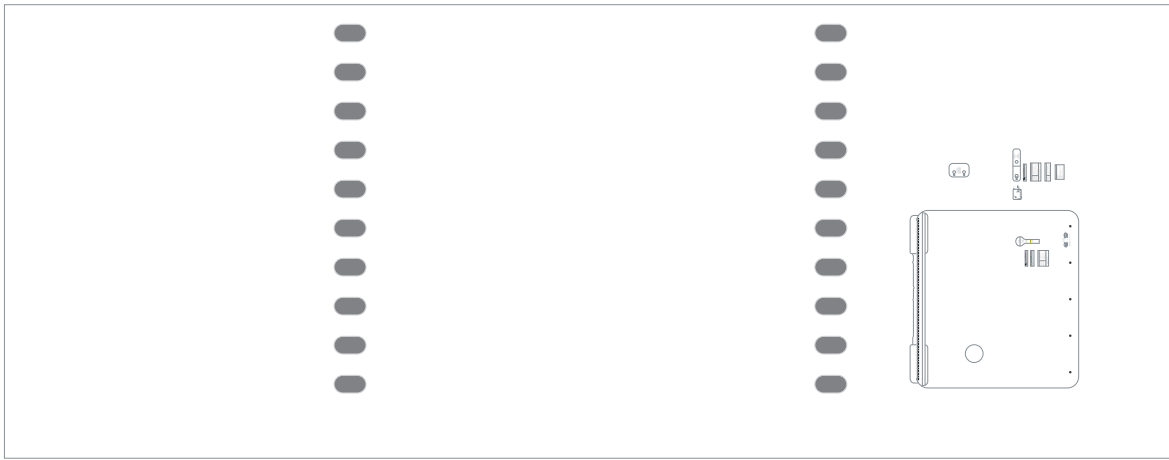


Blank space for 787-10 variant


C1

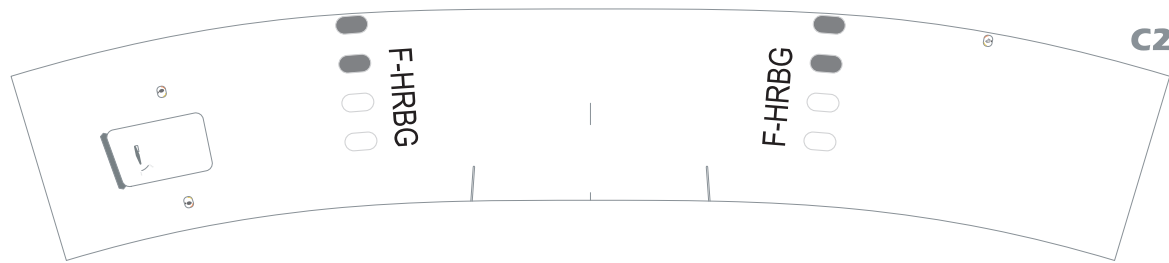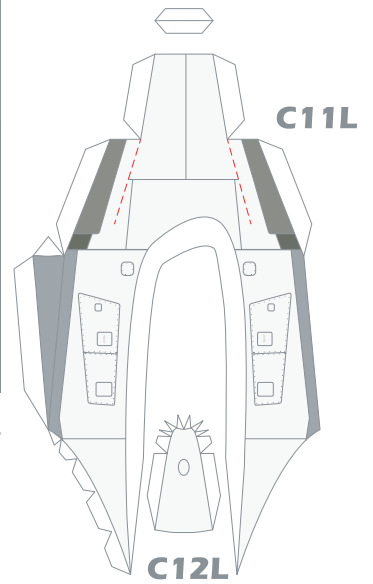

C2

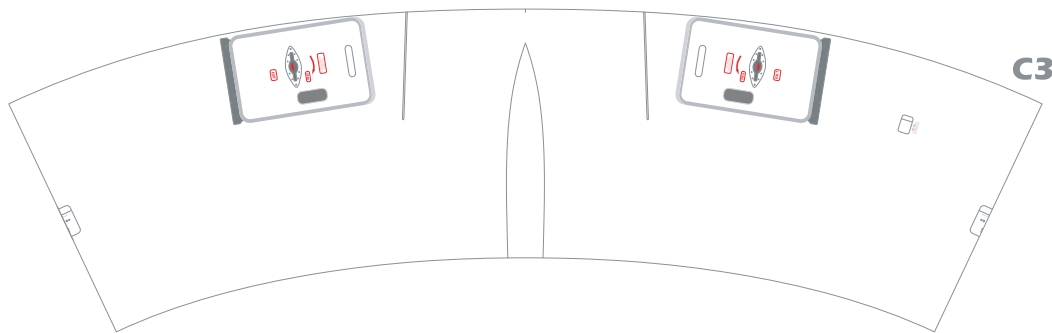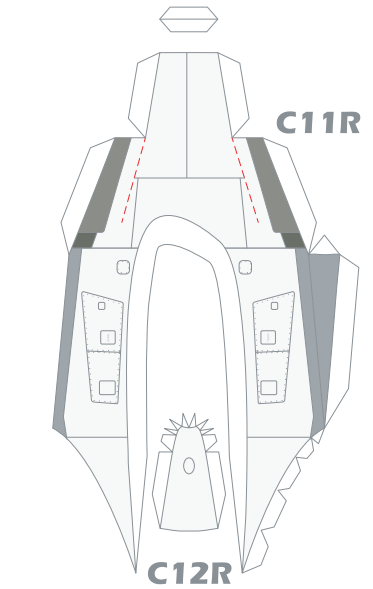

C3

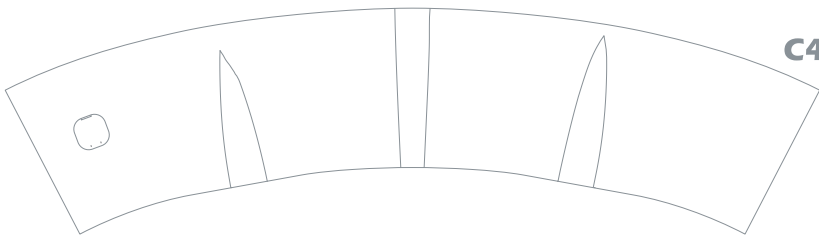


C4




C8


C9



C7

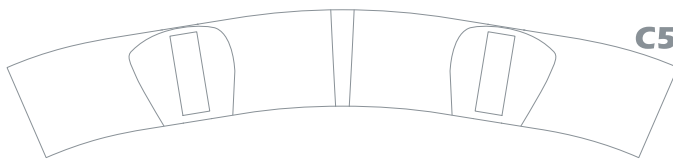

C5

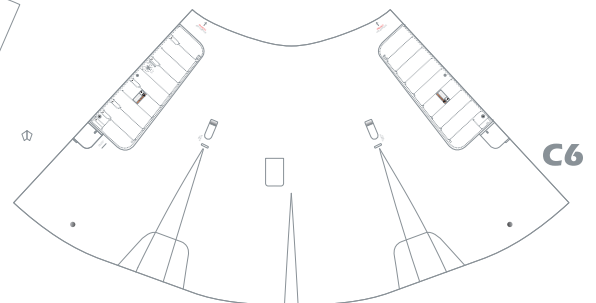









C6




C10L



C10R

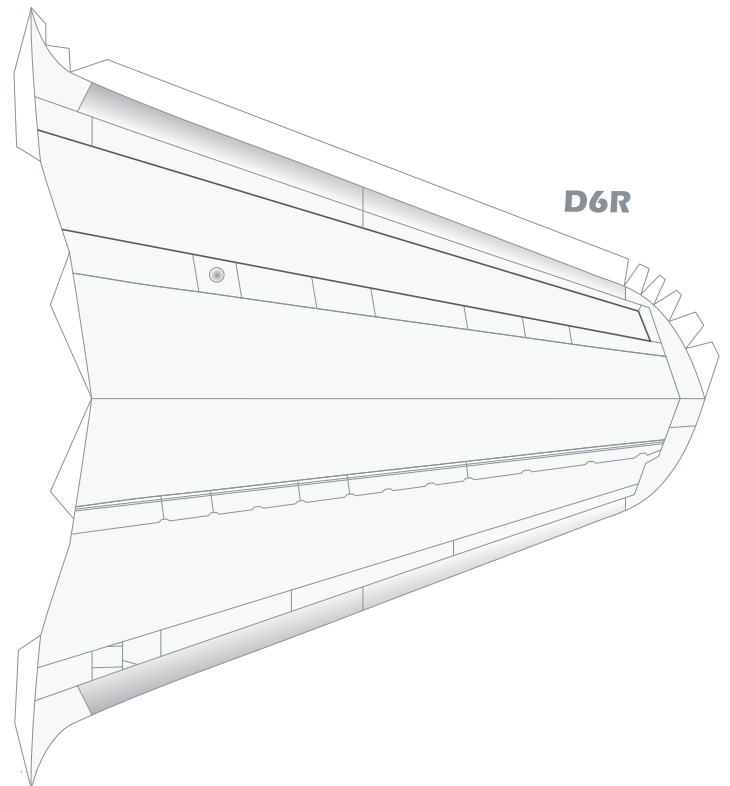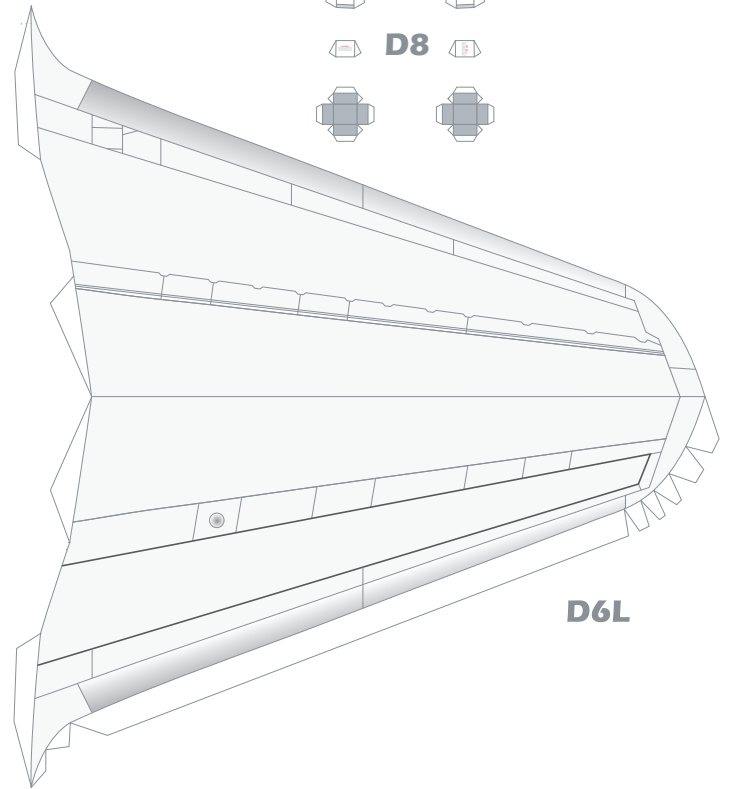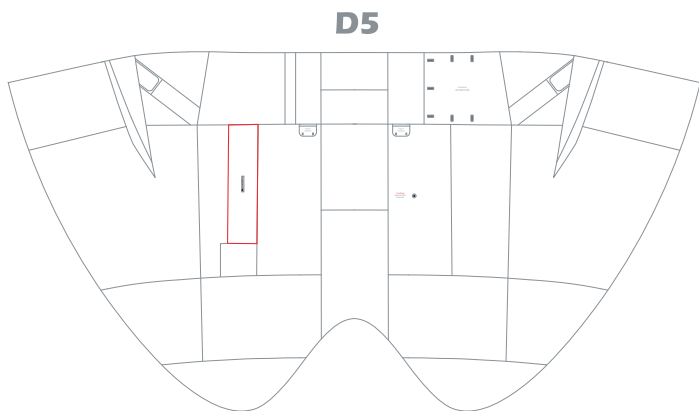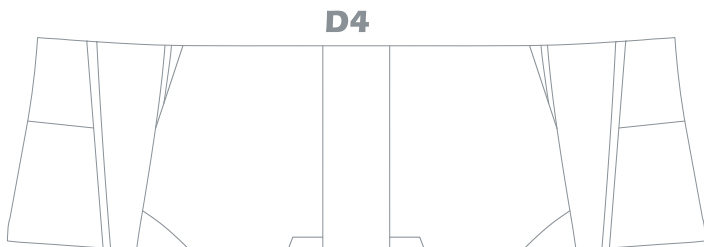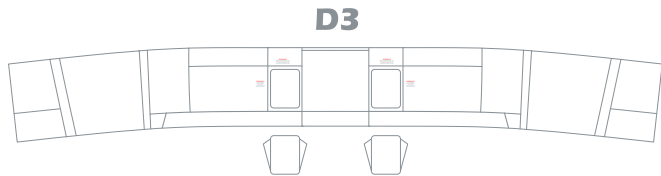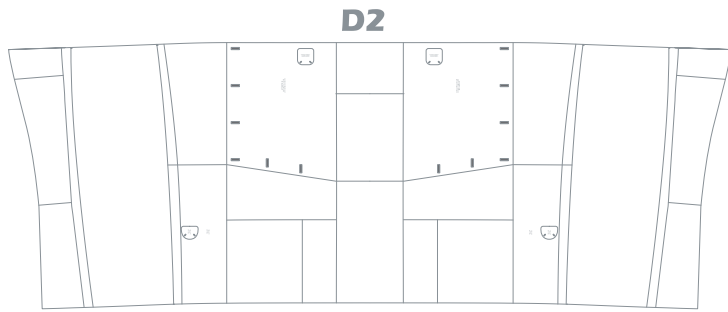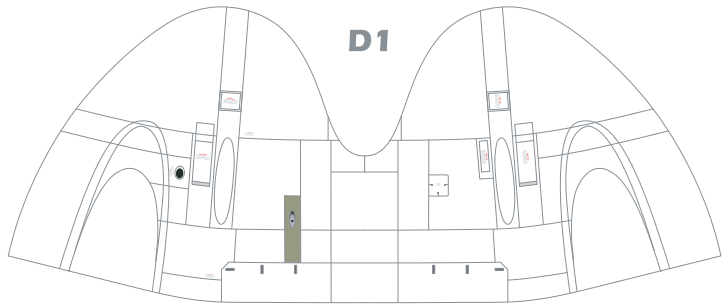

F1R

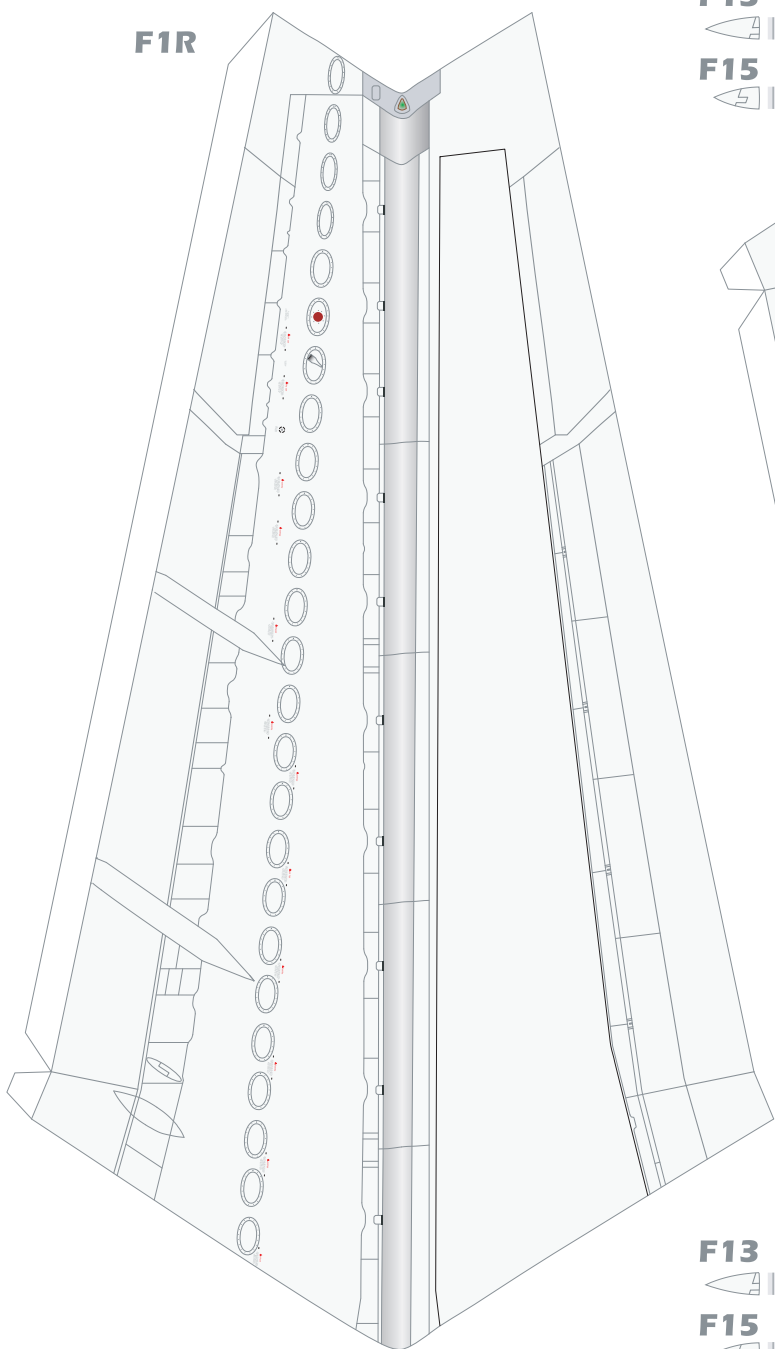


F13 F14



F15 F16




F1L

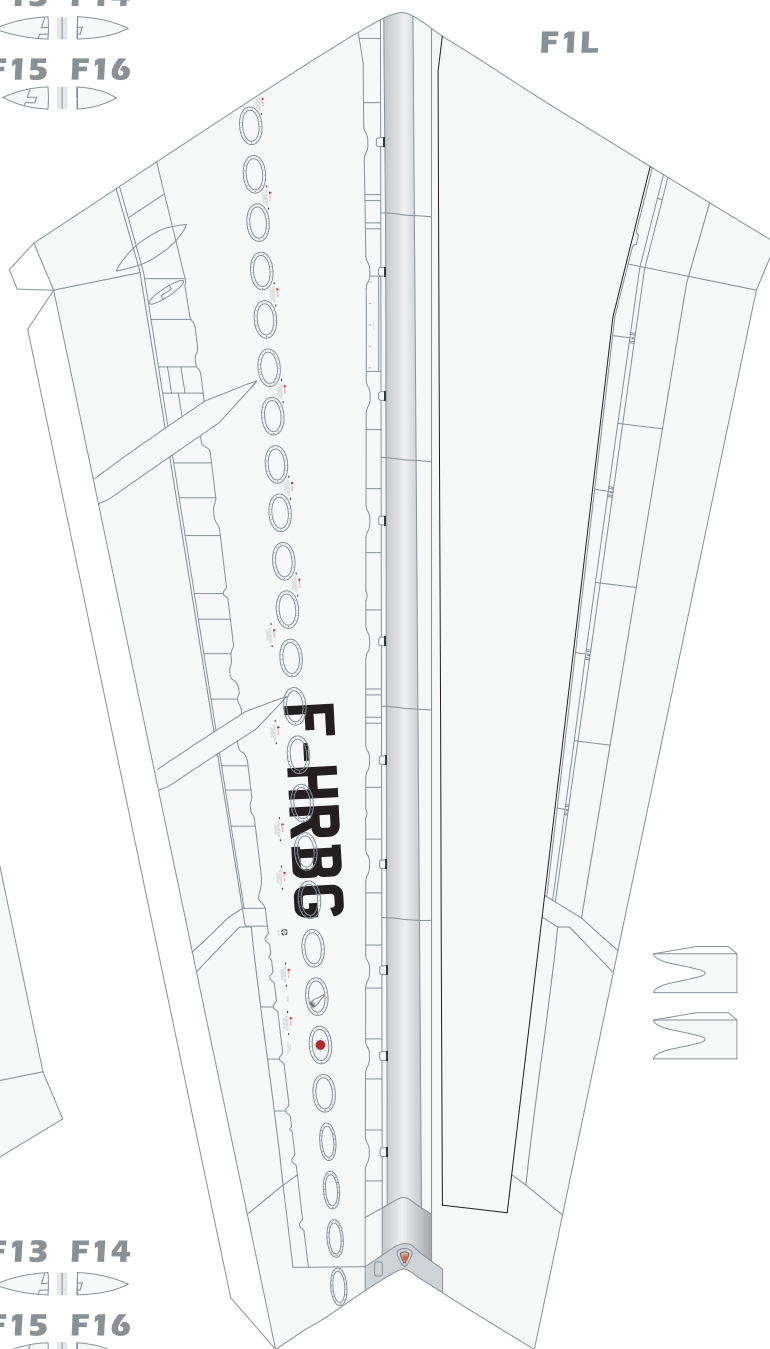

F13 F14



F15 F16

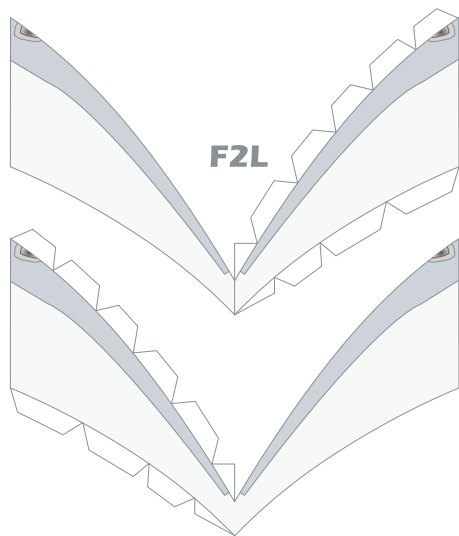


F2L

F2R

F3L



F4L

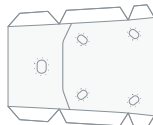


F5L



F5R



F4R

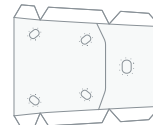


F3R



F6L



F7L

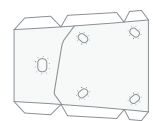


F8L



F8R



F7R

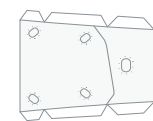

F6R



F9L



F10L




F11L



F11R











F10R



F9R



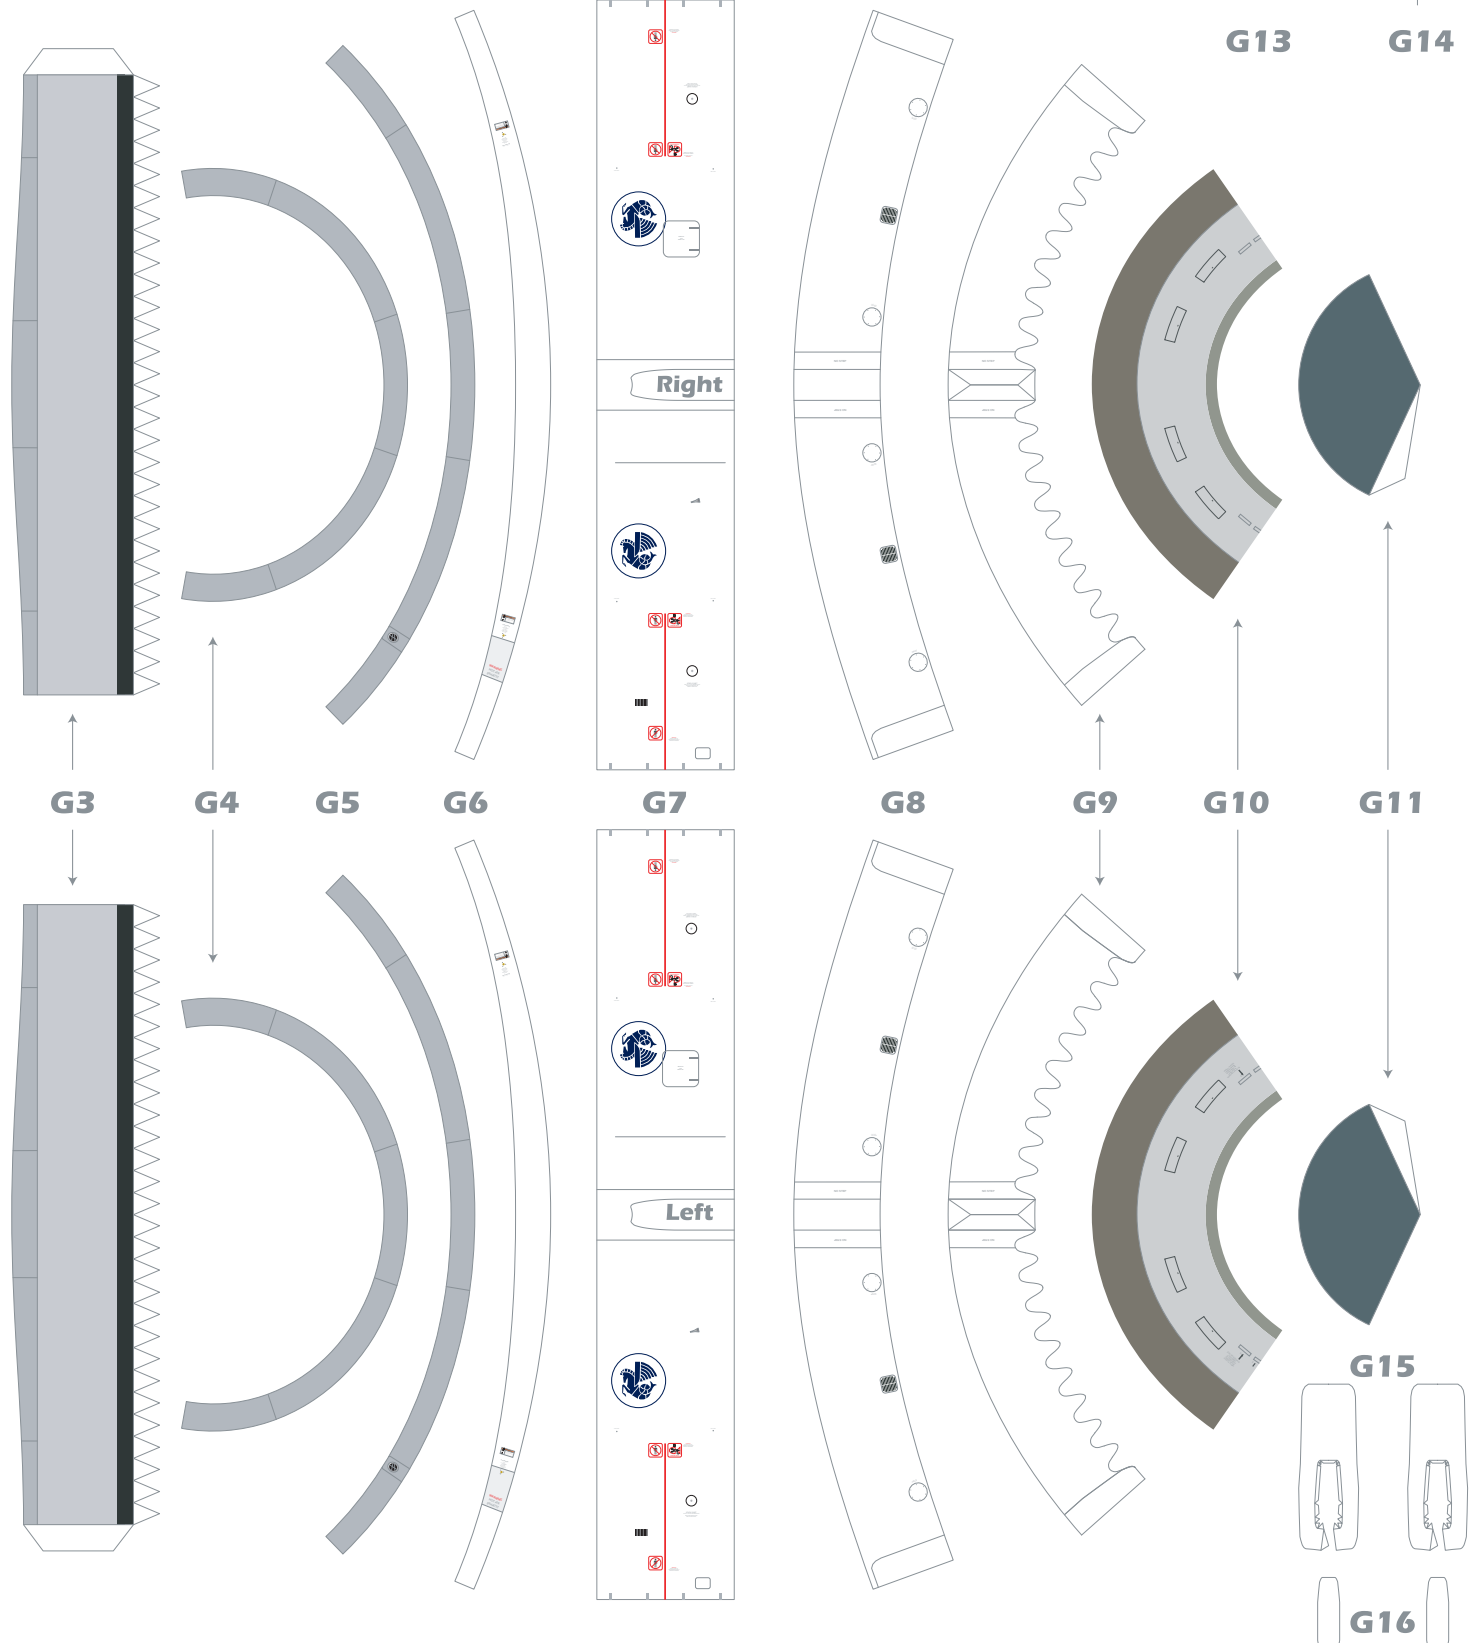
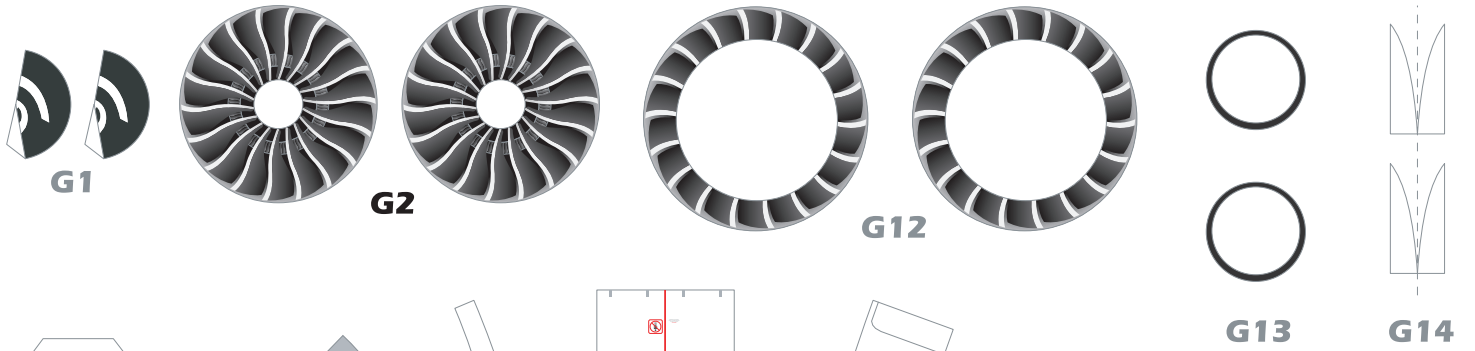


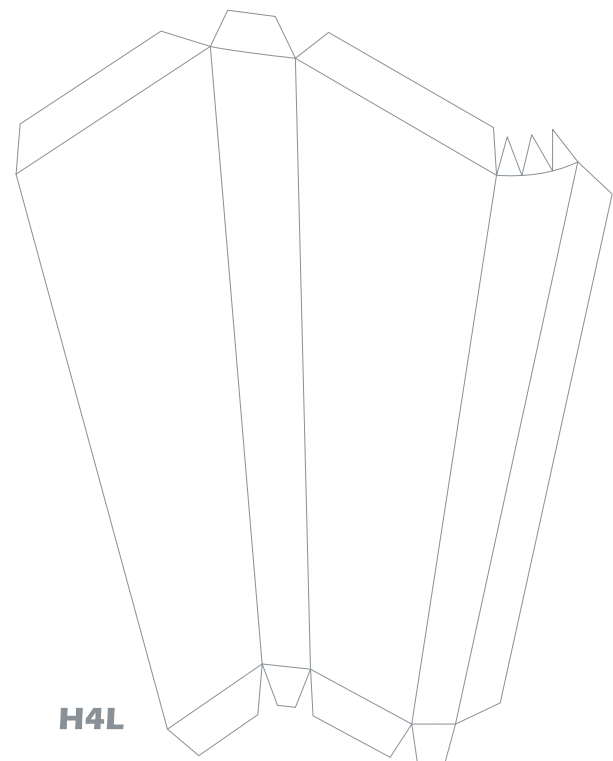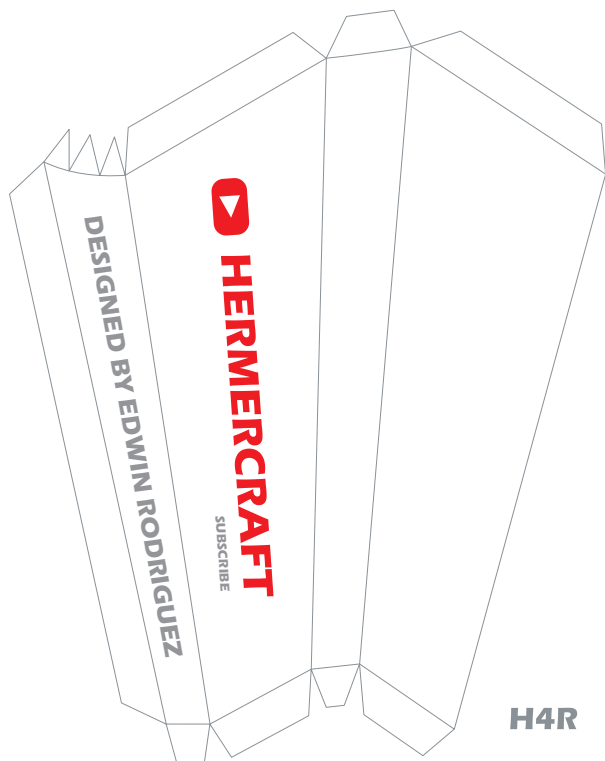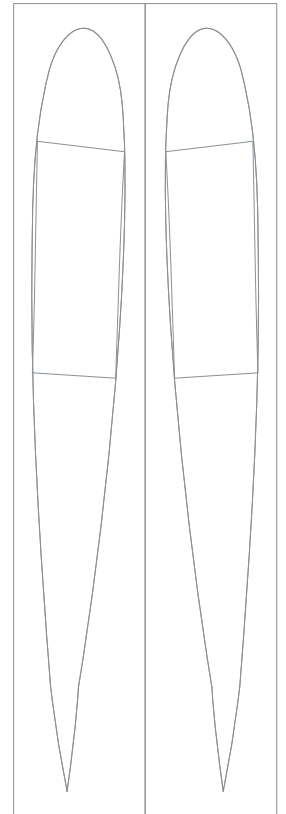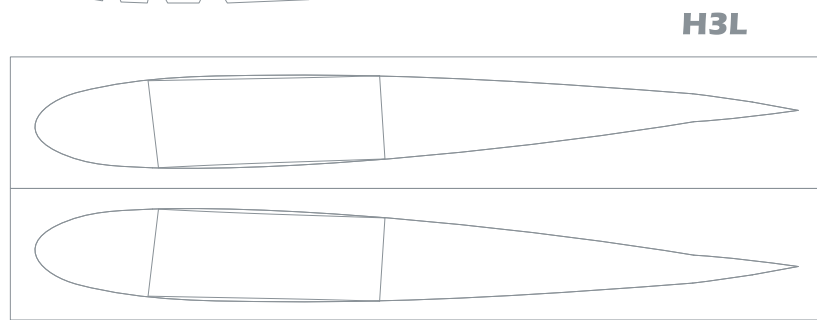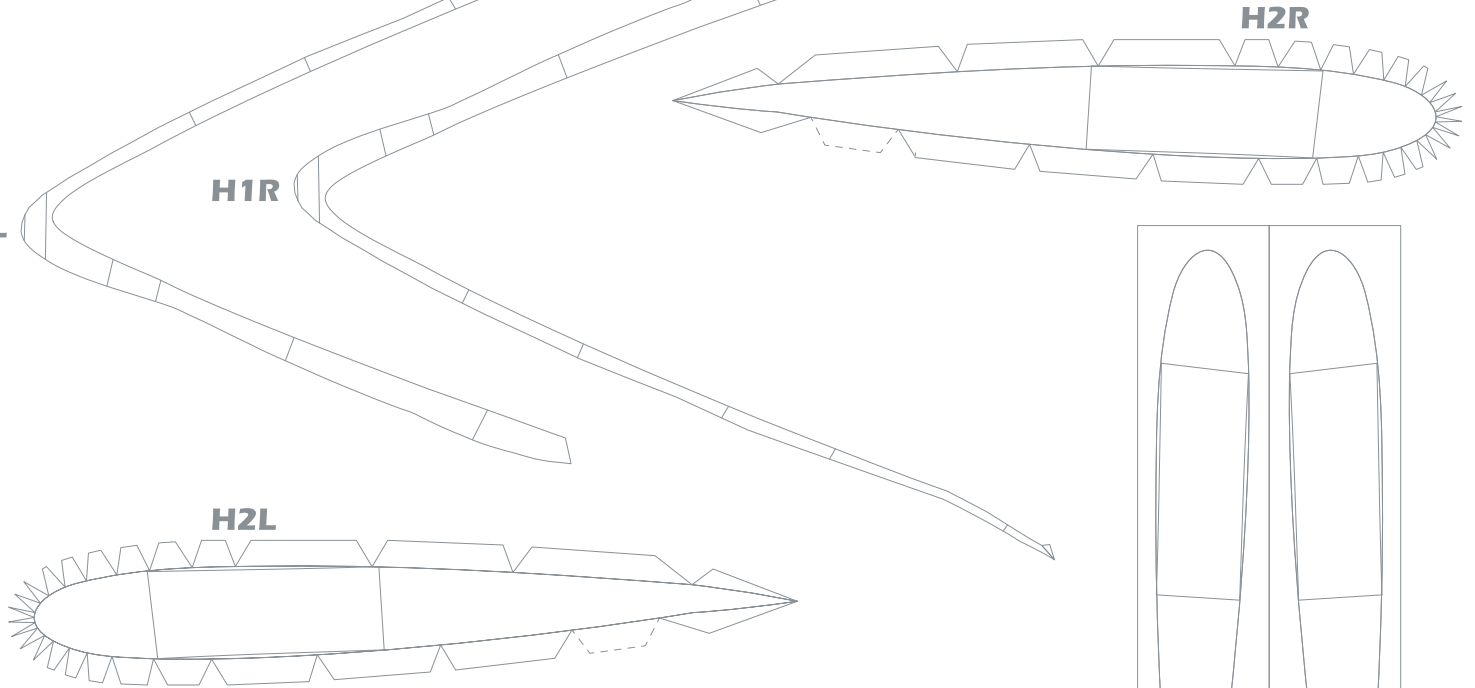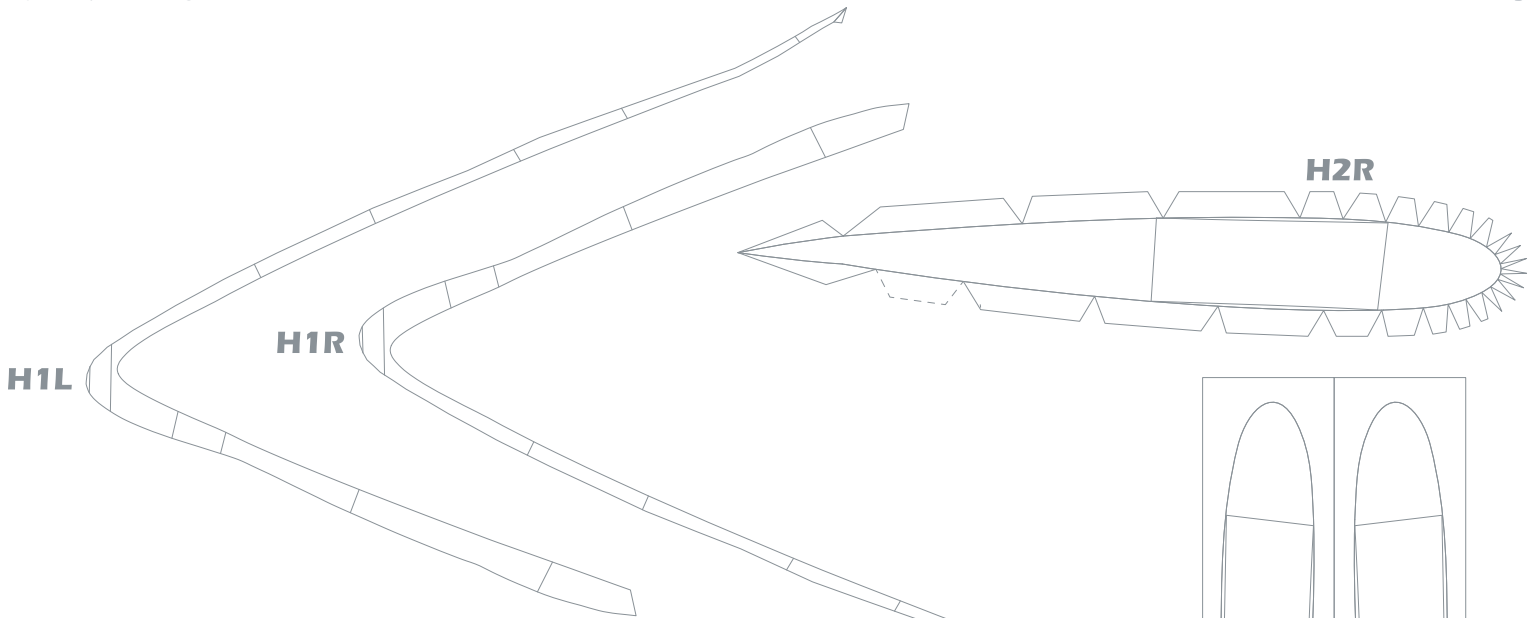


DESIGNED BY EDWIN RODRIGUEZ
HERMERCRAFT
SUBSCRIBE

H4R

H4L

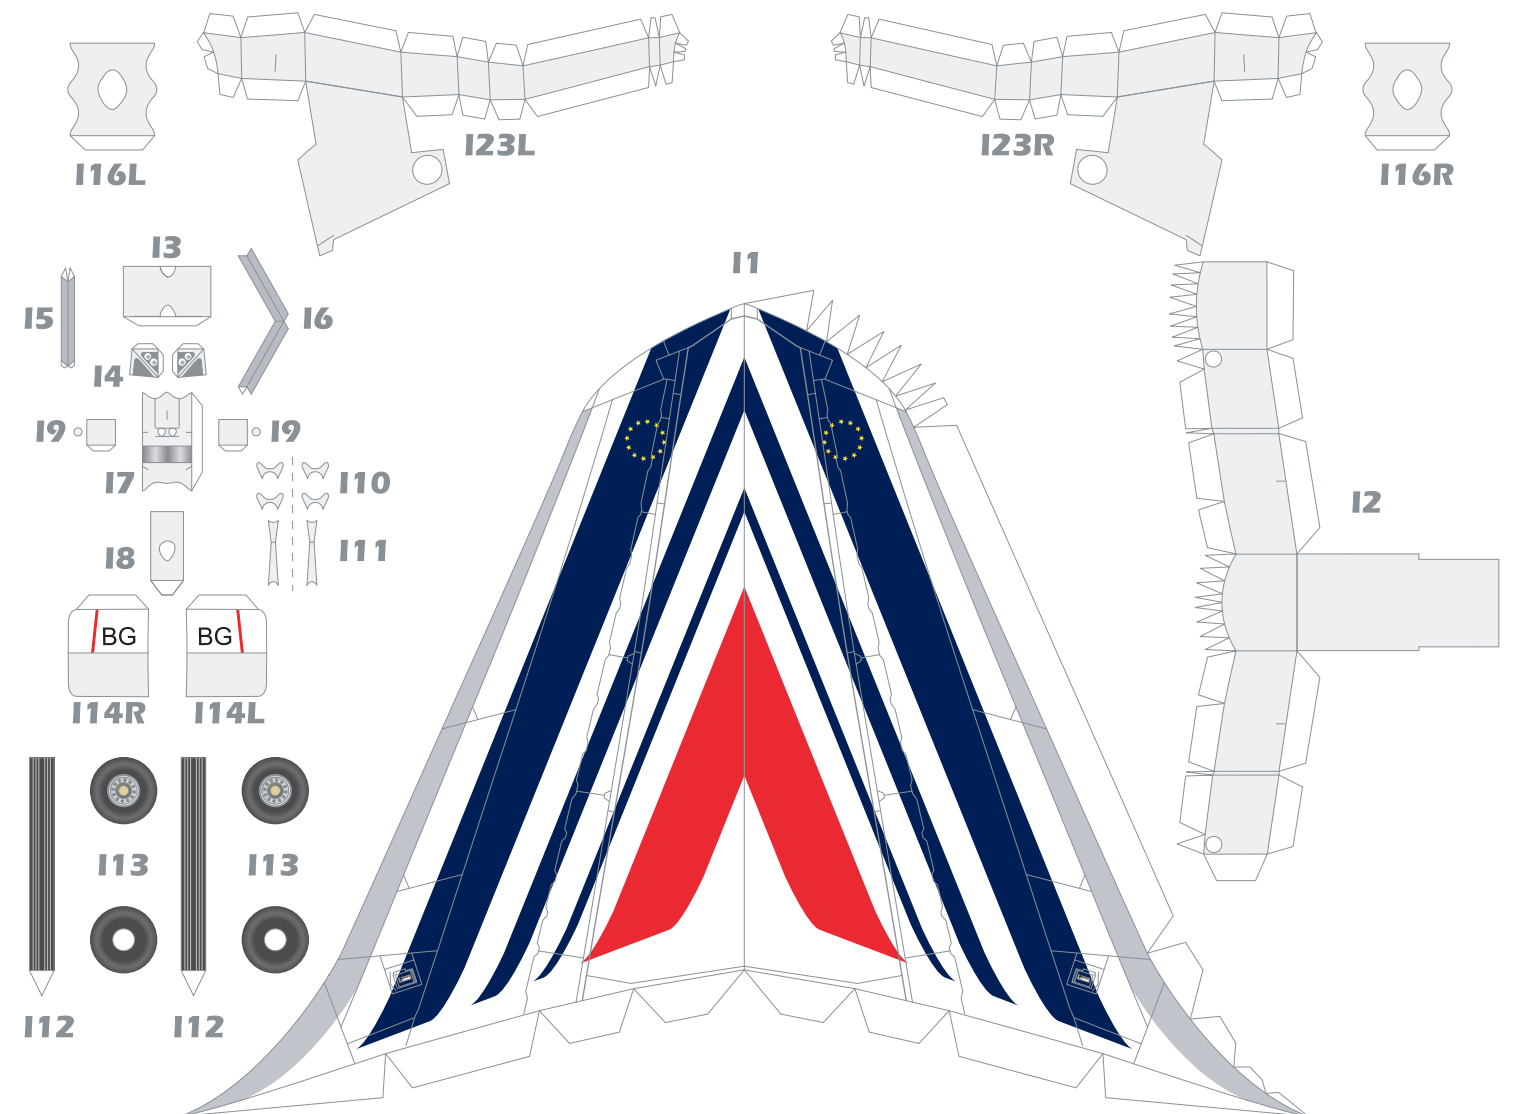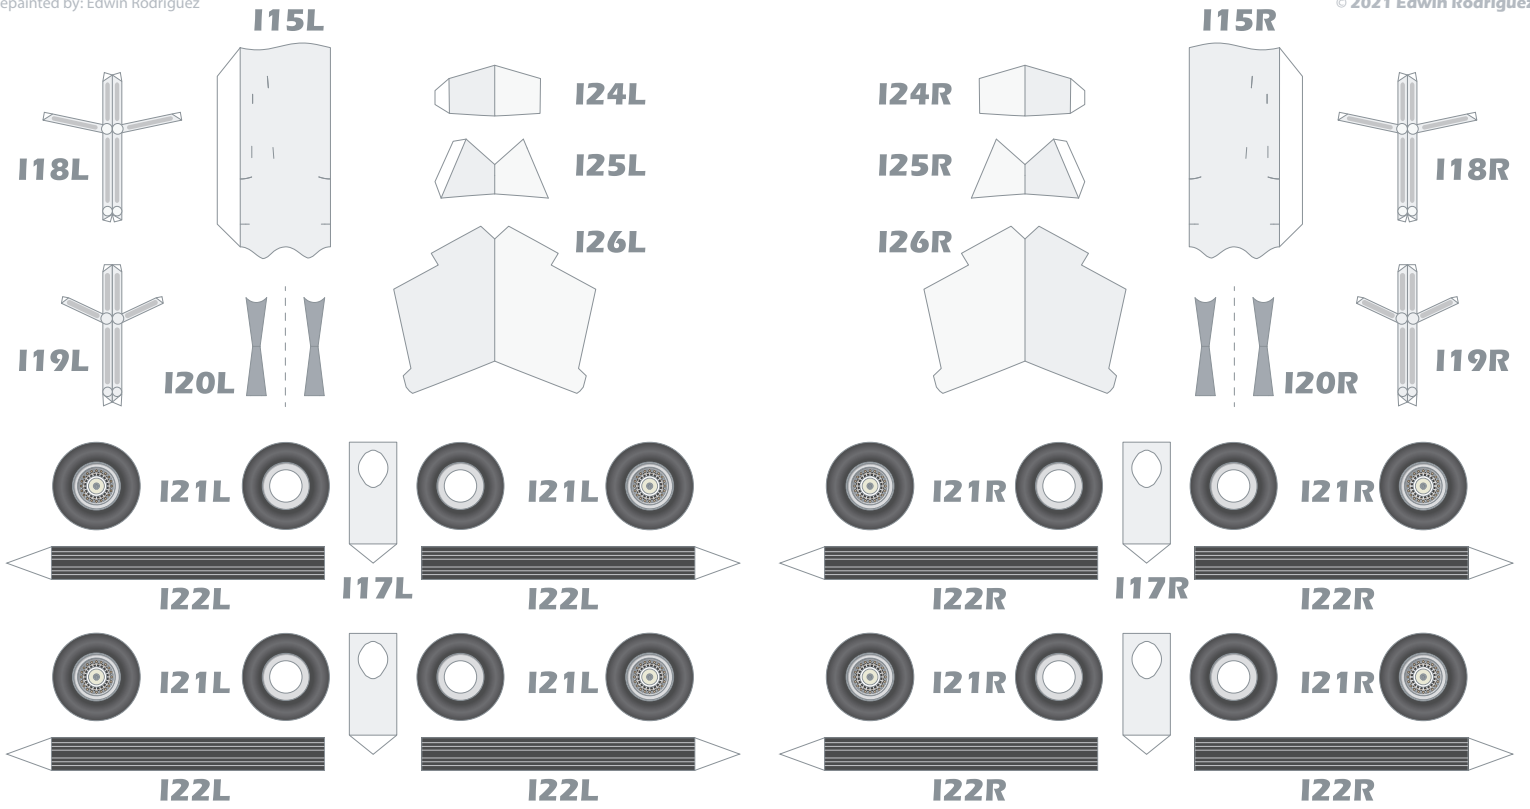

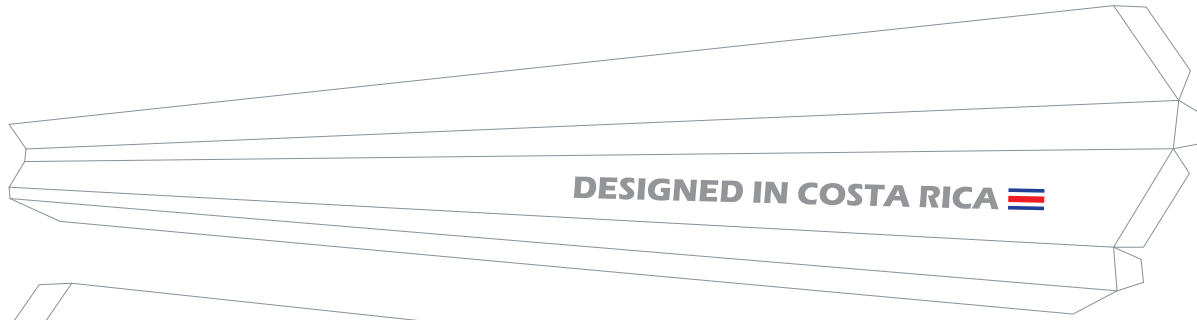

J1L



J1R

